



CHAPTER 2

HARDWARE CONFIGURATION

Before you use the terminal board, you must be sure to have this board plugged into pocket 16 DO box.

The LED17 in terminal board shows the power on status. When it turns to light, we have power to this board, otherwise when it does not light, no power is provided.

2.2 Pin Assignment of T1

Pin	Function	Pin	Function
1	GND	14	+5V
2	DO10	15	GND
3	DO11	16	GND
4	DO12	17	GND
5	DO13	18	GND
6	DO14	19	GND
7	DO15	20	DO23
8	DO16	21	DO24
9	DO17	22	DO25
10	DO20	23	DO26
11	DO21	24	DO27
12	DO22	25	+5V
13	GND		

